© Canon Inc.





You will need

Scissors, glue, ruler, rubber band, rounded pencil (or similar object), dried-up ballpoint pen (Begin by placing the ruler against the fold lines and drawing the empty ballpoint pen over them so that it is easy to make clean folds.)

Lines and icons

Scissors line -


Glue tab ● Cut out 🔀

Caution


Glue, scissors and other tools and materials may be harmful to children. Please keep your work out of the reach of children.

Make the umbrella surface and handle.

Glue A1 and A2 together, and fold to make sharp creases.

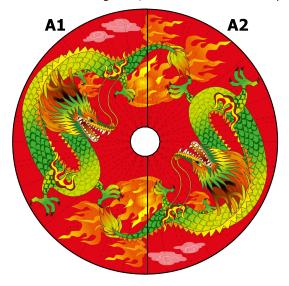

Roll B up tightly beginning from the end marked "start rolling here" and glue it.

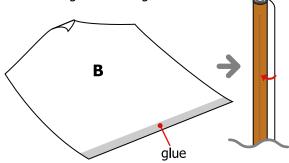


Rolling will be easier If you curl the paper around a rounded pencil or other object first to curve it into shape.



© Canon Inc. © Ayako Kishi © MINYA




Make the spokes

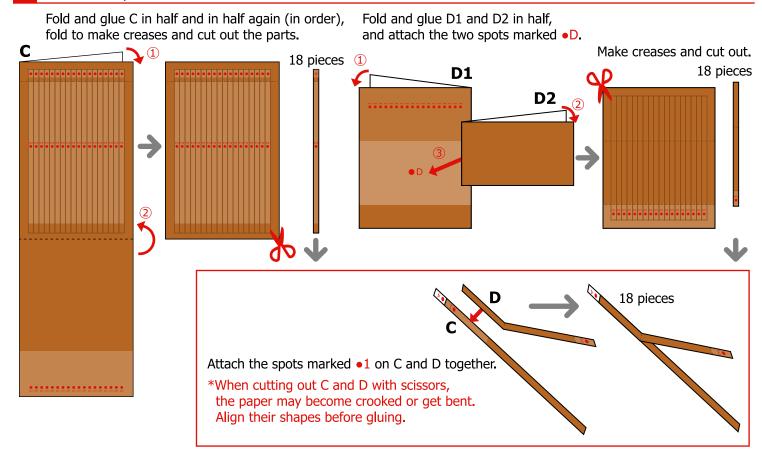

Attach the parasol surface and the spokes

Attach the spot marked •2 on C between the mountain fold lines on the reverse side of A.

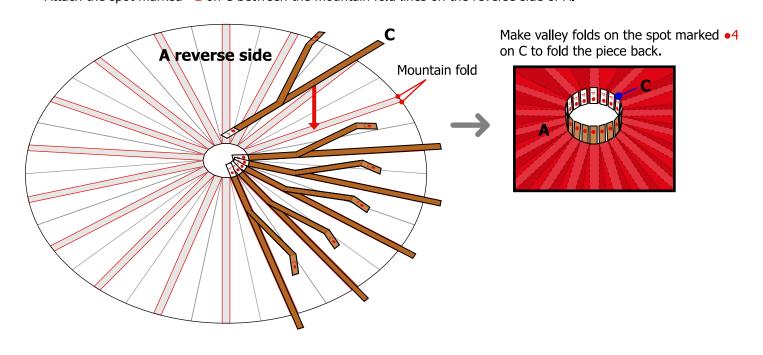




© Canon Inc. © Ayako Kishi © MINYA




Assemble the axis parts

 
Fold E, F, G, H and L in half and glue together, and cut out the parts.

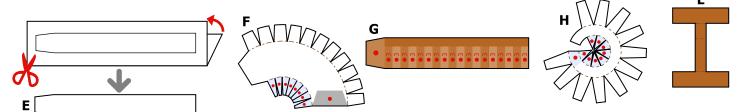


Attach the assembled E, F and B, wrap R around them, and make the "axis."

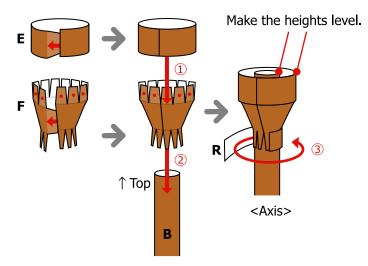


Curve the glue tabs on L, and wrap the part marked •B around the part on B marked •L. Keeping L folded up, wrap the bottom glue tab around B.

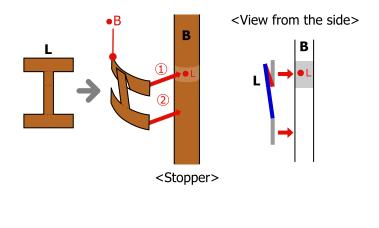

Attach the assembled G, H and I, wrap J around them and make the "slide axis."

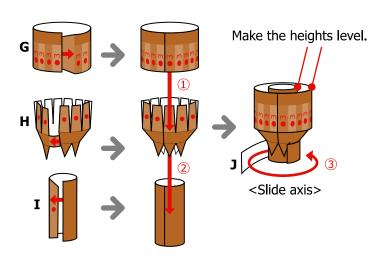

Fold Q in half and glue it together, and cut it out.

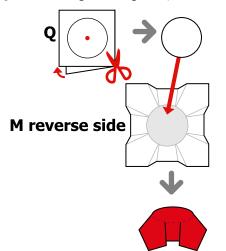

Glue to the center of the reverse side of the creased M.

© Canon Inc. © Ayako Kishi © MINYA





