

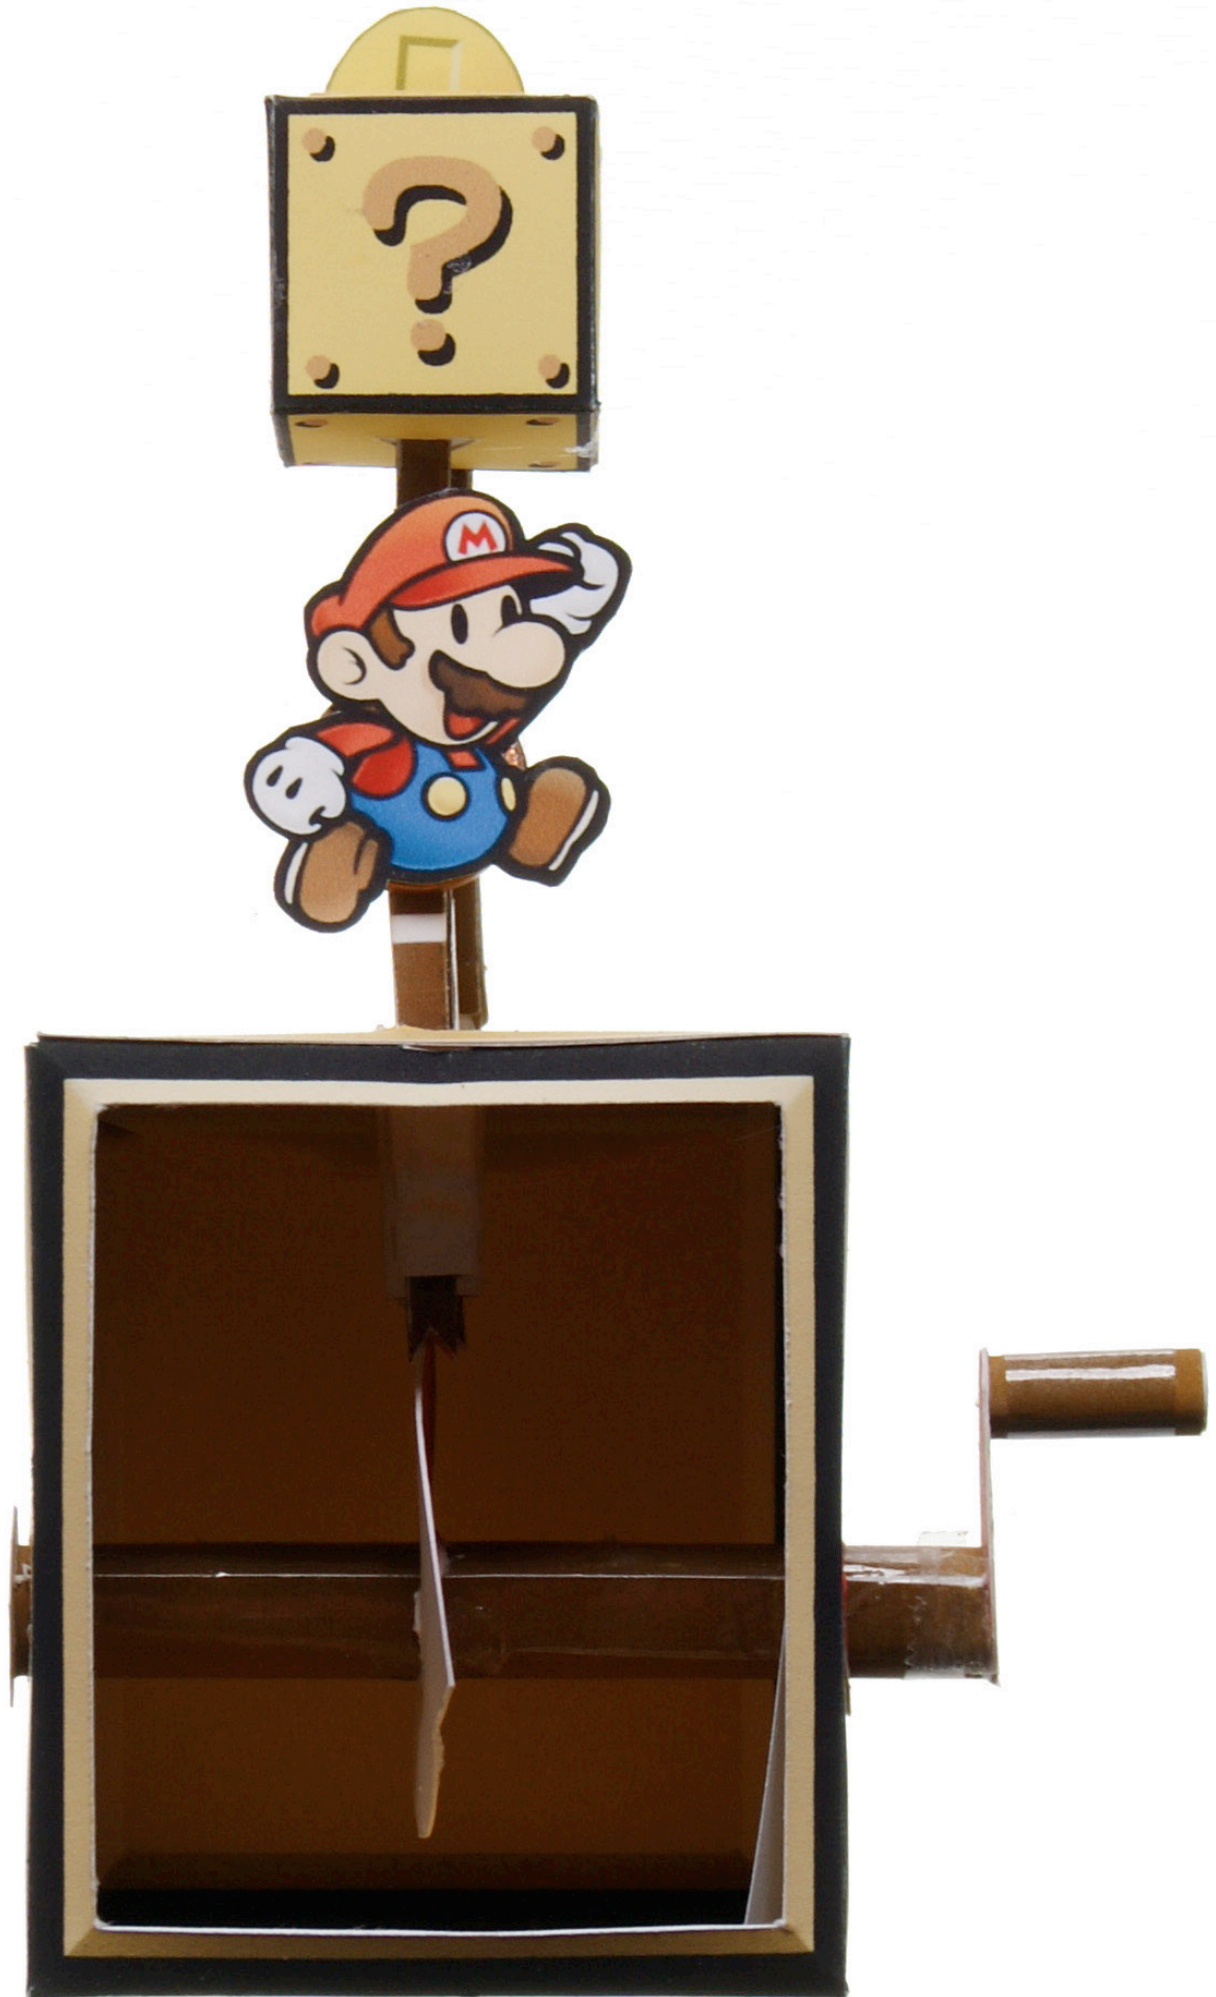
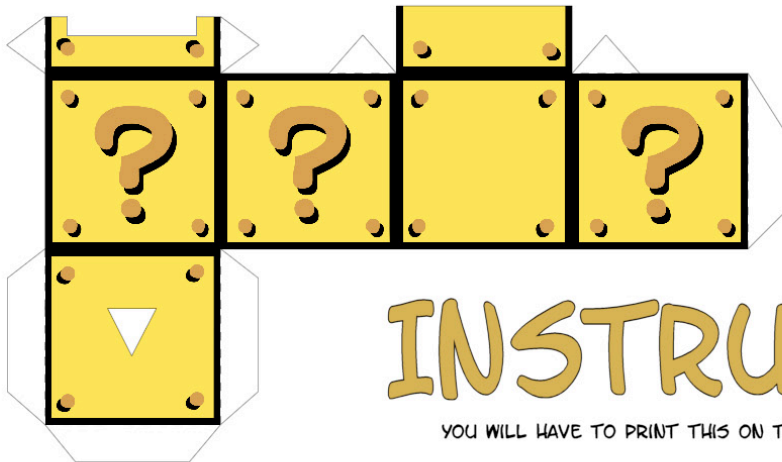
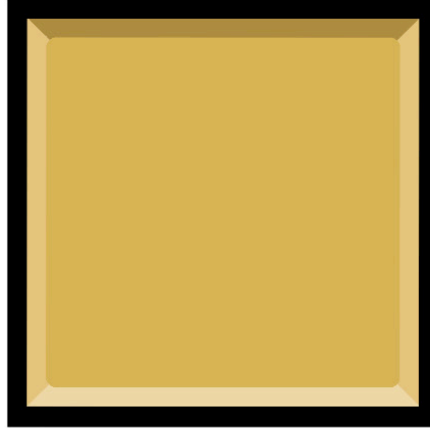


Mario Automat

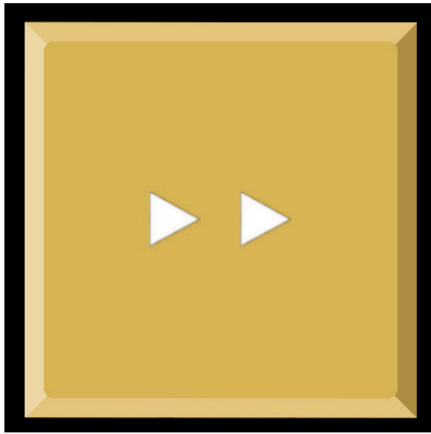

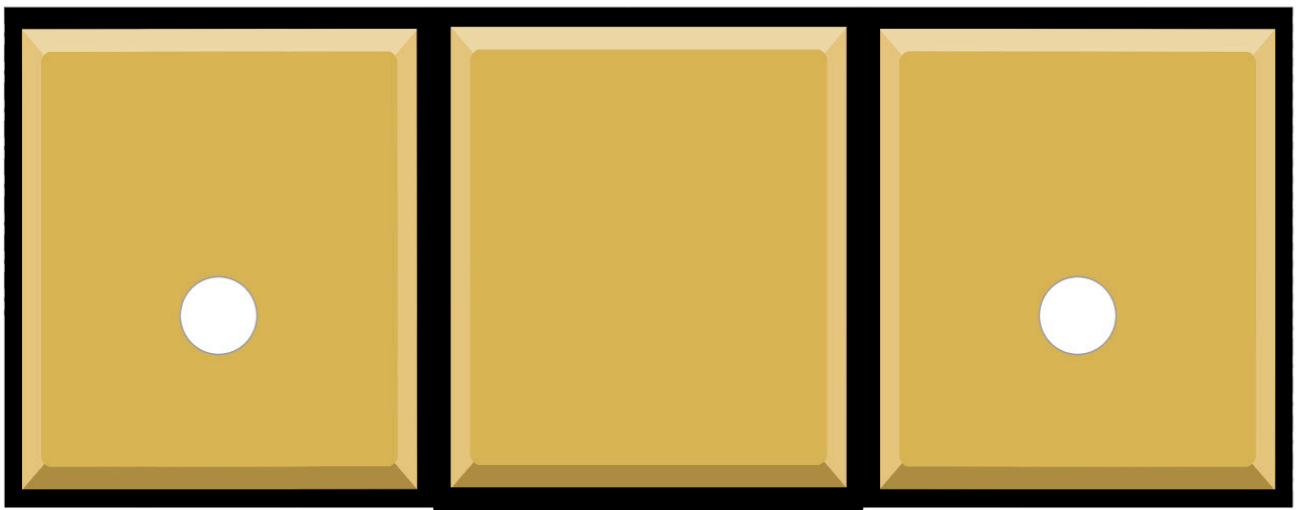

INSTRUCTIONS


YOU WILL HAVE TO PRINT THIS ON THICK PAPER, ABOUT 150-200 G/M²



JUST PUT IT INSIDE, NO NEED TO GLUE



GLUE THE TRIANGLE PIPES HERE

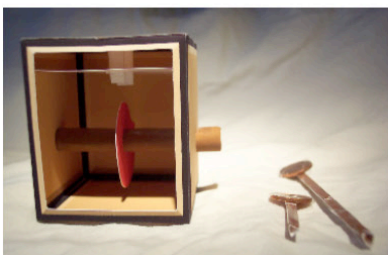

THE FLAT PART WITH THE 2 TRIANGLES HAS TO BE PUT THERE TO FIX THE PIPES
GLUE COINS ON TOP OF THE STICKS TO GIVE THEM WEIGHT
BE SURE THAT THE STICKS ARE THIN ENOUGH TO SLIDE THROUGH THE PIPES
IF THEY CAN'T, MAKE THEM THINNER



MAKE SURE THAT THE RED WHEEL IS ASSEMBLED LIKE THIS

ASSEMBLE THE PARTS LIKE
IN THIS PICTURE.
THE ?-BOX IS GLUED WITH
THE COTTER TO THE BIG BOX.
THEN YOU CAN PUT THE FIGURES
ON THE STICKS INTO THE HOLES.
THEY ARE NOT GLUED.
IF YOU CRANK CLOCKWISE, MARIO
SHOULD GET A COIN.

